

Pressure reducing valve for electrical control - open without current®



HAWIDO - REGULATING VALVES

Instruction for

**Pressure-Reducing Valves
with electrical ON/OFF function
Type 1503 and 1504**

DN40 - DN200



Keep this instruction manual at the location of the valve

Example of a nameplate



Once the commissioning work has been completed, enter the following data and always specify this additional information concerning the valve type, pressure and flow ratios, whenever you consult or have reason to question the manufacture or supplier:

Year of manufacture:..... DN: PN:

Serial number:

CONTENTS

| | |
|--|-----------|
| A. DESCRIPTION | 1 |
| 1. FUNCTION | 1 |
| 2. GENERAL SAFETY GUIDELINES | 1 |
| 3. RECOMMENDED INSTALLATION | 2 |
| B. COMMISSIONING | 3 |
| 1. OPERATION DIAGRAM (1503) | 3 |
| 2. OPERATION DIAGRAM (1504) | 3 |
| 3. PREPARATION | 4 |
| 4. VENTING | 4 |
| 5. ADJUSTMENT | 4 |
| 6. SETTING THE REACTION SPEED | 5 |
| 7. CHECKING FOR LEAKAGE | 5 |
| C. FAULT FINDING | 6 |
| D. PUTTING OUT OF SERVICE AND MAINTENANCE | 7 |
| 1. PUTTING OUT OF SERVICE | 7 |
| 2. MAINTENANCE AND SERVICE | 7 |
| 2.1 GENERAL | 7 |
| 2.2 ANNUAL CHECKS | 7 |
| 2.3 FOUR OR FIVE YEARLY MAINTENANCE | 8 |
| 3. REPAIR KITS AND SPARE PARTS | 9 |
| 3.1 MAIN VALVE WITH STAINLESS STEEL CONNECTION DN 40 TO DN 200 (DRAWING) | 10 |
| 3.2 MAIN VALVE (PARTS LIST) | 11 |
| 3.3 CONTROL VALVE PRESSURE REDUCING STAINLESS STEEL (DESIGN) | 13 |
| 3.4 CONTROL VALVE PRESSURE REDUCING STAINLESS STEEL (PARTS LIST) | 14 |
| 3.5 CONTROL LINE AND ACCESSORIES | 15 |
| 3.6 POSITION INDICATOR (DRAWING) | 20 |
| 3.7 POSITION INDICATOR (PARTS LIST) | 21 |
| E. ANNEX | 22 |
| 1. TORQUE TABLE | 22 |
| F. HAWLE IN EUROPE | 23 |

A. Description

1. Function

The pressure-reducing valve for the electric remote control reduces a variable inlet pressure (p1) to an almost constant, lower outlet pressure. Fluctuating flow and inlet pressure (p1) do not have any effect on the outlet pressure (p2), which is controlled by the pressure-reducing control valve (6). The outlet pressure (p2) can be adjusted within the range of 1.5 to 12 bar (Standard).

Caution:

The HAWIDO valves, type 1503 and 1504, close quickly. Depending on the plant system, this closing behaviour can lead to pressure surges in the piping system. In case of uncertainties or other questions, please contact our technical department.

Valve type 1503: When the electric solenoid valve (9) is energized, the basis valve (1) can open, (solenoid valve (9) de-energized, closed, Hawido de-energized, closed).

Valve type 1504: When the electric solenoid valve (9) is de-energized, the basic valve (1) can open (solenoid valve (9) de-energized, continuity, Hawido de-energized, in operation).

Technical features:

| | |
|--------------------|---|
| Medium: | Drinking water |
| Pressure stages: | PN 10 (Standard DN 200 and upwards) PN 16 (Standard up to and including DN 150) PN 25 |
| Flanges: | Connection dimensions acc. DIN EN 1092 – 2 |
| Manometer: | EN 837-1, accuracy class 1.0 |
| Material: | EN-GJS-400-15 |
| Temperature range: | 2 to 40° C |

2. General safety guidelines

The Hawle HAWIDO regulating valve is designed for use in drinking water supply systems. Please consult the manufacturer before using it with other media.

Material damage or injury to persons can occur if it is not installed, commissioned, operated or maintained according to these instructions or to codes of practice.

All technical regulations (e.g. SVGW, ÖVGW, DVGW...) and codes of practice (e.g. VDE, VDI ...), laws and standards are taken as a minimum standard and must be adhered to and applied.

Work on electrical installations (e.g. installation of magnetic position switches etc.) may only be carried out by personnel suitably qualified for this work.

The responsibility for layout, installation position and commissioning of the fittings in the pipe work lies with the designer, installer and/or user. Design or installation errors can adversely affect the operation of the regulating valve and can create a significant risk. If in doubt please consult us.

General limitations of use are as follow:

- Max. pressure ratio limits for continuous operation: $p1 : p2 = 4 : 1$
- Max. pressure ratio limits for short term operation: $p1 : p2 = 6 : 1$
- Minimum required pressure difference: 1 bar
- Maximum allowed pressure difference: 20 bar


- Maximum allowed flow speed for continuous operation: 3 m/s
- Maximum allowed flow speed for short term operation: 5 m/s

3. Recommended installation

Before the installation, all pipe work must be blown or flushed through to prevent any foreign material such as pieces of wood, stone etc. from entering the valve.

Legend:

- 1 Gate valve input side
- 2 Strainer
- 3 Pressure reducing valve, e.g. type 1500
- 4 Dual-chamber flange
- 5 Mounting piece, welding part
- 6 Gate valve output side
- 7 Air release valve
- 8 Pressure relief valve, type 1400 (optional)

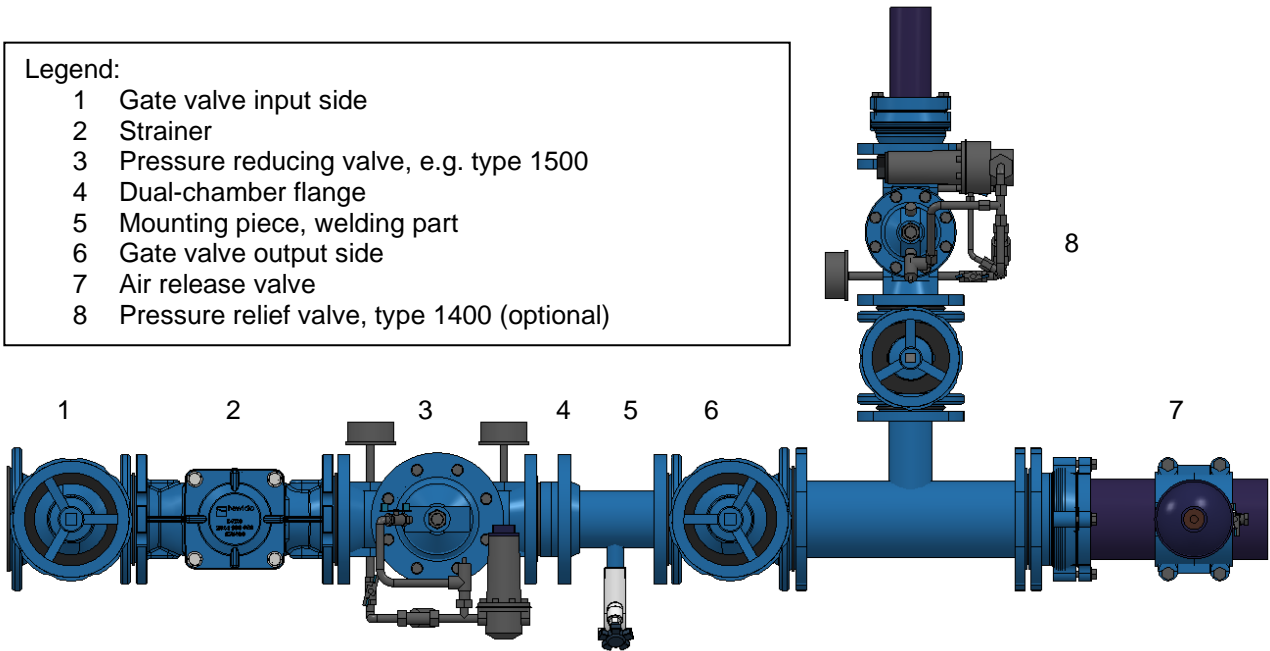


Regulating valves are normally fitted with the valve cover upwards and it is recommended that shut-off valves be fitted on both sides plus a dirt trap on the inlet side. Depending on the installation situation, a mounting adapter may also be required.

During maintenance, the valve is taken out of service. For this situation, a bypass system must be considered for an uninterrupted supply.

Depending on the hydraulic conditions, the installation of a pressure relief valve type 1400 in the outlet downstream of the pressure reducing valve must be checked.


Before commissioning, a check should be made that no coarse foreign bodies can penetrate into the HAWIDO. For other types of installation, please contact us for advice.

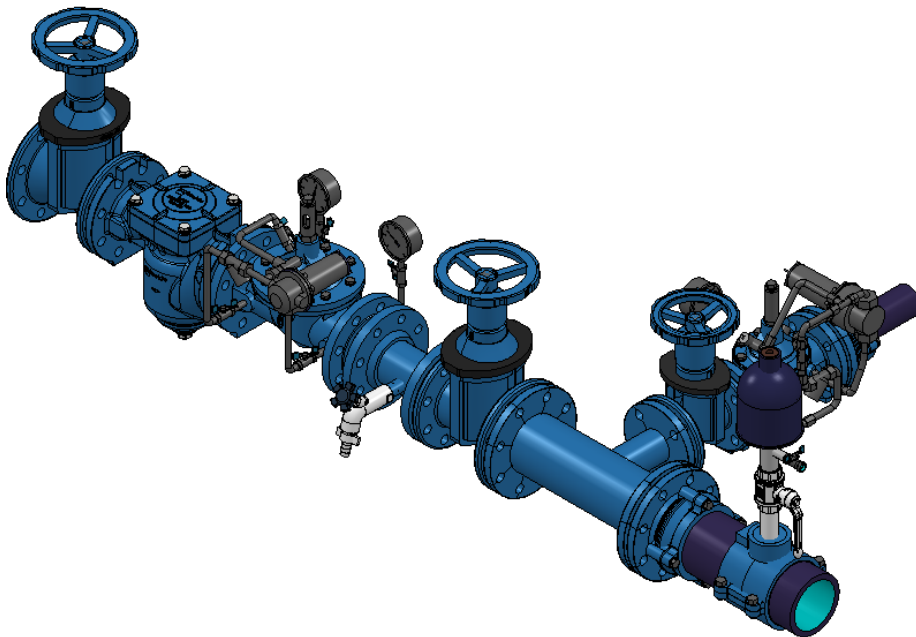

Januar 2022

B. Commissioning


1. Operation diagram (1503)

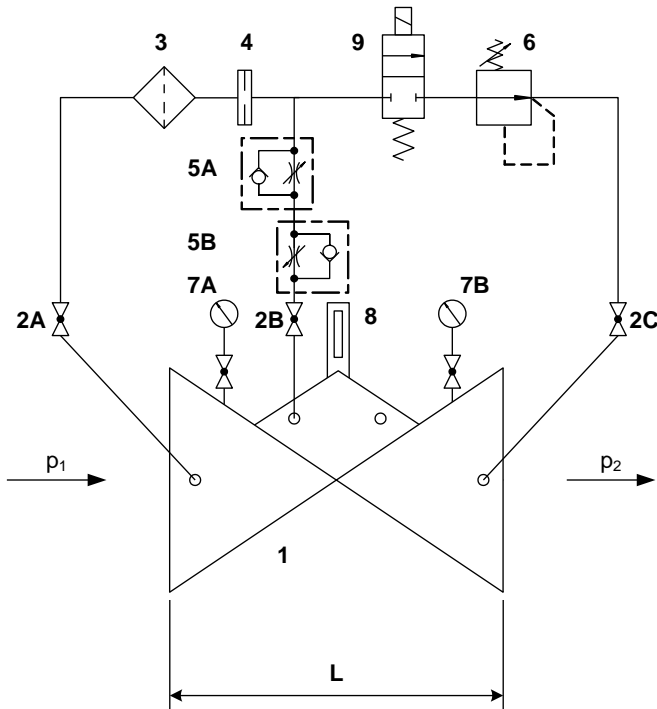

Components

- 1 Main valve 1200
- 2 Ball valves (A, B, C)
- 3 Filter
- 4 Orifice
- 5 One-way flow restrictor (A, B)
- 6 Control valve
- 7 Pressure gauge (A, B)
- 8 Optical position indicator
Electrical position indicator (optional)
Valve opening limiter (optional)
- 9 Solenoid valve

2. Operation diagram (1504)

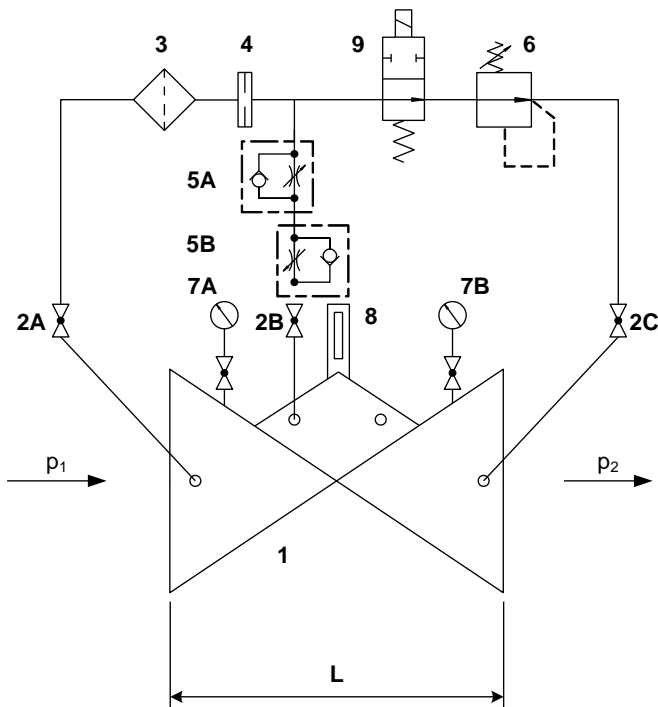

Components


- 1 Main valve 1200
- 2 Ball valves (A, B, C)
- 3 Filter
- 4 Orifice
- 5 One-way flow restrictor (A, B)
- 6 Control valve
- 7 Pressure gauge (A, B)
- 8 Optical position indicator
Electrical position indicator (optional)
Valve opening limiter (optional)
- 9 Solenoid valve

3. Preparation

Before commissioning the valve, check that the gate valves on the inlet and outlet sides of the valve are closed and that the flange connections are correctly tightened and sealed.

On main valve:

- Open ball valves (2A and 2B)
- Loosen the locknut on the one-way flow restrictor (5) and turn out the set screw completely
- Close ball valve (2C)
- Screw in the plug on the optical position indicator to one turn before the sealing point.
- Loosen the headless screw in the male adaptor elbow union with venting

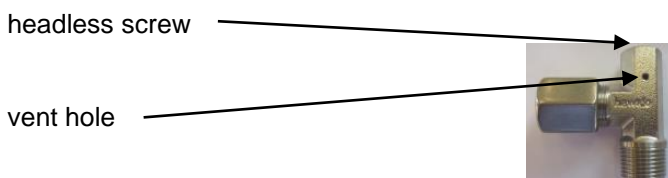

- Tip over the adjusting lever on control valve (6) and turn the lever counter-clockwise until no resistance is felt from the spring.

4. Venting

Proceed as follows:

Screw in the plug on the optical position indicator to one turn before the sealing point.

Slowly open the inlet gate valve until water flows into the valve. The valve fills with water and the air escapes via the slightly opened threaded union and the central plug.

Once the valve venting procedure has caused all the air to be expelled from the control circuit, re-tighten the plug screw of the valve cover and the loosened union. Check that all fittings are sealing properly and tighten if necessary.

Open inlet valve **slowly** and completely.

Check:

When the outlet gate valve is opened slightly the valve should close and remain shut. Then re-close the gate valve.

If the valve does not close, repeat the commissioning from the preceding chapter onwards.

Particular care must then be taken to ensure that the upper valve chamber and control circuit are properly vented.

5. Adjustment

Procedure:

- **Valve type 1503:** Energize electric solenoid valve (9), solenoid valve should now have continuity.
- **Valve type 1504:** Electric solenoid valve (9) must be de-energized, solenoid valve (9) has continuity in the de-energized state.
- Open ball valve (2C) **slowly**; the valve opens and fills the piping on the outlet side to a pressure of up to about 0.4 bar, after which the valve closes again.
- Open the shut-off valve **slowly** in steps on the outlet side; the valve closes once the outlet piping is filled and the consumption of water is no longer required. Depending on the piping system, this procedure can take up to a few minutes

- Create a normal consumption of water for this nominal diameter (e.g. by opening a hydrant), to enable the outlet pressure to be set with the hand wheel on the control valve (6) (the outlet pressure is increased when the handwheel is turned in a clockwise direction).

Caution:

Work on electrical installations (e.g. installation of magnetic position switches, solenoid valves) may only be carried out by suitably qualified personnel.

Note

Always wait until the hydraulic system has stabilized itself before making every half rotation of the hand wheel. Check the pressure on the outlet side with the pressure gauge. Once the desired outlet pressure (hydraulic or static pressure difference of about 0.5 bar) is set, tighten the screw on the hand wheel of the control valve again.

6. Setting the Reaction Speed

If the HAWIDO does not operate smoothly, or pressure surges occur in the pipe work, this can be corrected through corresponding adjustment of the one-way flow restrictor (5).

5A: setting of the opening reaction

5B: setting of the closing reaction

Procedure:

Loosen the locknut. Turn the set screw inwards in a clockwise direction with screwdriver, until the valve operates smoothly. And then tighten the locknut again.

Caution

The set screw must always be open to the extent of at least 3 to 5 turns, otherwise the valve will not open quickly enough after the closing operation. A special setting is required by very high inlet pressures.

The HAWIDO valves, type 1503 and 1504, close quickly. Depending on the plant system, this closing behaviour can lead to pressure surges in the piping system. In case of uncertainties or other questions, please contact our technical department

Functional testing of the solenoid valves:

- **Valve type 1503:** When the electric solenoid valve (9) is de-energized, the basis valve closes. If the solenoid valve (9) is energized, the Hawido valve must operate in the normal manner.
- **Valve type 1504:** When the electric solenoid valve (9) is energized, the basic valve closes. If the solenoid valve (9) is de-energized, the Hawido-valve must operate in the normal manner.

7. Checking for leakage

HAWIDO's are tested during manufacture for both leakage and function. When checking for leakages on site, particular attention must therefore be given to flange connections, the control line and the plug screw on the valve cover and, if necessary, they are to be tightened further.

Notes:

C. Fault finding

| Symptoms | Possible cause | Action |
|--|---|--|
| Valve does not open | One-way flow restrictor blocked | Replace or unscrew several times the set screw until valve functions properly |
| | One-way flow restrictor closed too far | Undo the set screw until valve functions properly |
| Valve allows pressure creep | One-way flow restrictor blocked | Replace or screw set screw in and out fully several times and then reset |
| | Filter in control circuit blocked | Clean the filter |
| | Air in the control circuit or valve chamber | Vent |
| | Membrane defect | Carry out service, replace membrane |
| | Foreign matter in the main valve | Carry out service and remove foreign matter |
| | Valve spindle jammed by encrustation | Carry out service and remove encrustation |
| Loud noise | Unsatisfactory installation conditions | Change outlet pressure by 0.1 to 0.2 bar. Slightly open or close One-way flow restrictor. Contact Hawle customer service department. |
| | Wrong valve size | Calculate correct valve size. (If necessary contact Hawle) |
| Erratic operation | One-way flow restrictor incorrectly set | Reset (according to Chapter: <i>Setting the reaction speed</i>) |
| Original pressure value is not reached | Pressure gauge faulty | Check or replace pressure gauge |
| | Changed operating conditions | Reset accordingly (see Chapter: <i>Recommended installation</i>) |
| Epoxy-coating damaged | Transportation damage, installation damage | Repair with Hawle two-component repair set for coatings |

D. Putting out of service and Maintenance

1. Putting out of service

The operating pressure reducing valve must first be hydraulically shut off as follows:

- **Slowly** close the gate valves after and before the valve
- **Slowly** close ball valve (2A, 2B, 2C)

The valve is taken out of operation and the maintenance can be accomplished.

2. Maintenance and service

2.1 General


Our long experience with diaphragm valves that are controlled by the flow medium indicates that our HAWIDO's normally function trouble-free for many years. Regular maintenance is, however, necessary to ensure continued reliable operation.

Under normal operating conditions the following should be carried out:

- Once a year, the valve should be checked for correct operation (function check)
- Once a year, the filters upstream of the valve and in the control lines should be cleaned
- Every four or five years, the inner working components should be checked, and worn parts replaced (maintenance).

Under unusual operating conditions (e.g. with water which contains quantities of suspended matter, high pressure reduction, small flow rates etc) maintenance should be carried out more frequently.

Maintenance label

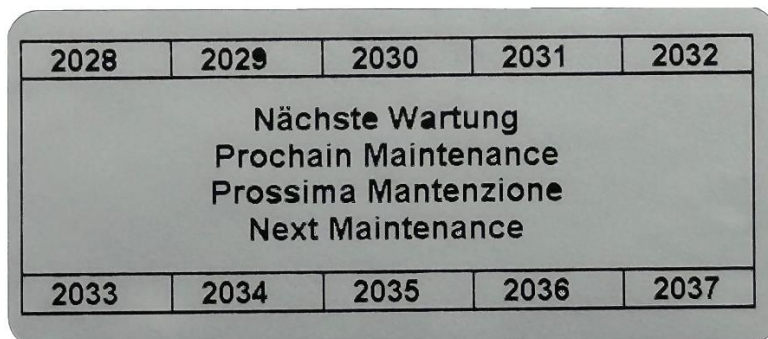

Maintenance intervals are indicated by perforation or colored marking with a permanent marker

2.2 Annual checks

Cleaning the strainer in the main supply

- Unscrew the lid
- Clean the filter with a brush or cloth or replace it
- Install the filter and screw the lid back on

Cleaning the filter in the control line

- Unscrew the lid of the filter
- Clean the filter with a brush or cloth or replace it
- Install the filter mesh and screw the filter lid back on

Checking the valve

- Remove the optical position indicator.
- Check that the valve spindle moves easily by raising and lowering it with the threaded rod, especially when a modified counter seat is installed
- Install the optical position indicator.

Putting the valve back into service

- see chapter *Commissioning*

Checking the operation of the valve

Note: In order to avoid pressure surges, large flow rates have to be throttled by closing the gate valve before the Hawed-Valve **slowly**:

- **Valve type 1503:** Energize electric solenoid valve (9), solenoid valve should now have continuity.
- **Valve type 1504:** Electric solenoid valve (9) must be de-energized, solenoid valve (9) has continuity in the de-energized condition.
- **Slowly** close ball valve (2C), Hawido-valve must close.
- **Slowly** open ball valve (2C), Hawido-valve must open.

After the check, open the gate valves before and after the valve.

2.3 Four or five yearly maintenance

Cleaning the strainer in the main supply

- Unscrew the lid
- Clean the filter with a brush or cloth or replace it
- Install the filter and screw the lid back on

Cleaning the filter in the control line

- Unscrew the lid of the filter
- Clean the filter with a brush or cloth or replace it
- Install the filter mesh and screw the filter lid back on

Main valve (see chapter: *Repair kits and spare parts*)

- Undo the fittings of the control line and put the complete control line beside.
- Disassemble the Optical Position Indicator and replace the gaskets
- Undo the screws of the valve cover and remove this valve cover.
- Visually inspect all inner components for wear, dirt and scaling
- Clean inner components, seat and inner surfaces including the valve cover
- Disassembly the spindle guide at the housing, rinse the housing interior.
For valves from DN 40 to DN 100 built in 2012 and DN 125 to DN 200 built in 2014, the spindle guide has to be removed from inside of the housing. The guiding thread of the spindle and the base valve must be **extremely clean**. Grease the thread well (eg Food Grease Aqua, Item No. 5292, see chapter control line parts and accessories).
- Replace the diaphragm, the O-ring and if necessary also the seat seal
- Thinly grease the area around the spindle guide with an agent, which is suitable for contact with foodstuffs. Check for easy movement of the spindle in the housing guide and in the cover guide.
- Assemble the main valve (See torque table in Annex). During assembly the easy movement of the spindle must be checked **several times** by actuating the threaded rod.

Disassembling the control valve (see chapter: *Repair kits and spare parts*)

- Tip over the adjusting lever
- Turn the lever counter-clockwise until no resistance from the spring can be felt
- Remove housing screw
- Remove the guide screw item 21 and the seat item 24.
- Replace the diaphragm, the O-ring and if necessary also the seat seal
- Visually inspect the inner surfaces of the housing and clean if necessary, including the cover item 2
- Assemble the control valve (See torque table in Annex).
- Refit the fittings of the control line which had been put beside.

Checking the operation of the one-way flow restrictor

- Undo the locknut
- Screw in the set screw and then unscrew it as far as it goes
- Screw in again a few turns. This process must be easy and with little resistance

Putting the valve back into service

- see chapter *Commissioning*

Checking the operation of the valve

Note: In order to avoid pressure surges, large flow rates have to be **throttled** by closing the gate valve before the Hawido-valve **slowly**.

- **Valve type 1503:** Energize electric solenoid valve (9), solenoid valve should now have continuity.
- **Valve type 1504:** Electric solenoid valve (9) must be de-energized, solenoid valve (9) has continuity in the de-energized condition.
- **Slowly** close ball valve (2C), Hawido-valve must close.
- **Slowly** open ball valve (2C), Hawido-valve must open.

After the functional check, the valve on the inlet side should be completely open. Check whether the valve is open completely on the outlet side.

3. Repair kits and spare parts

Several spare parts are required for the four or five yearly maintenance. These can be obtained as a repair kit for:

- the main valve
- for the control valve
- for the control circuit
- optical position indicator

The article numbers are shown in the parts lists and spare parts lists.

Attention:

When ordering spare parts, always specify the valve type, serial number and year of manufacture.


Important:

Spare parts of EPDM (membranes, seals, o- rings) have to be stored in a dark place, protected from UV radiation!

Durability in dark storage:

EPDM: eight years after production

3.1 Main valve with stainless steel connection DN 40 to DN 200 (drawing)

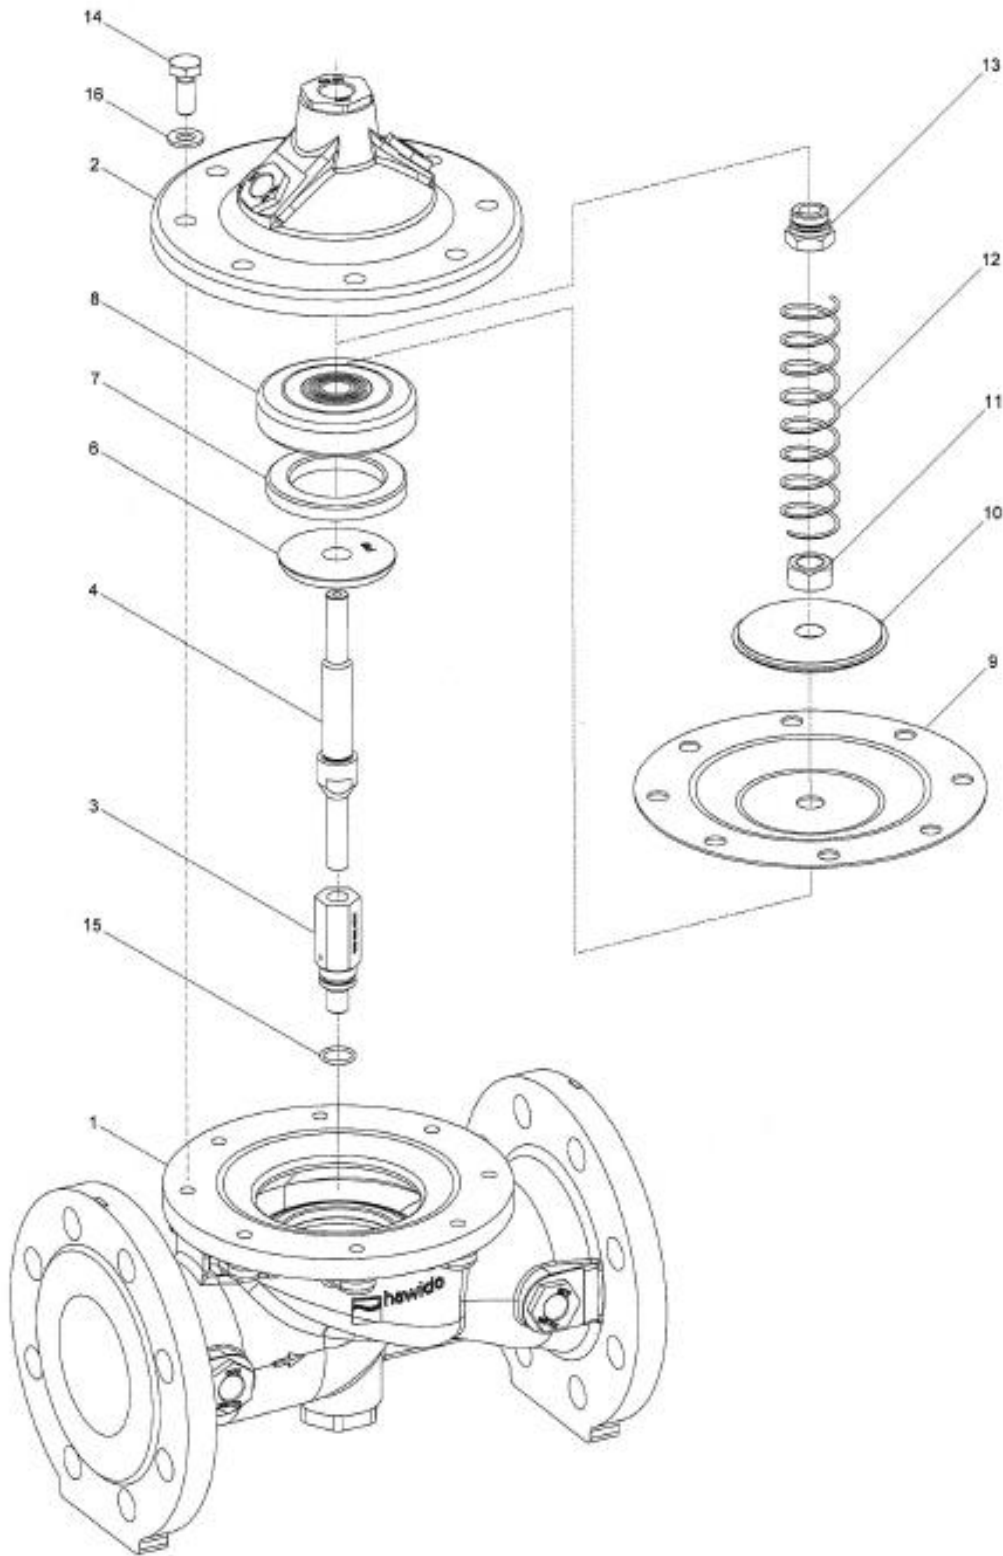

08.12.2011

3.2 Main valve (Parts list)

| Item. | Description | Material | Article number | | | | |
|-------|---|-----------|----------------|--------------|--------------|--------------|--------------|
| | | | DN 40 | DN 50 | DN 65 | DN 80 | DN 100 |
| 1 | Body ° | GJS-400 | 1004 040 000 | 1004 050 000 | 1004 065 000 | 1004 080 000 | 1004 100 000 |
| 2 | Valve cover | GJS-400 | 1014 050 000 | 1014 050 000 | 1014 065 000 | 1014 080 000 | 1014 100 000 |
| 3 | Spindle guide cover | INOX | 1024 900 000 | 1024 900 001 | 1024 900 002 | 1024 900 003 | 1024 900 004 |
| 4 | Spindle | INOX | 1026 050 000 | 1026 050 000 | 1026 065 000 | 1026 080 000 | 1026 100 000 |
| 5 | Seat | INOX | * | * | * | * | * |
| 6 | Counter seat | INOX | 1044 040 001 | 1044 050 001 | 1044 065 001 | 1044 080 001 | 1044 100 001 |
| 7 | Seal | EPDM | 1022 040 000 | 1022 050 000 | 1022 065 000 | 1022 080 000 | 1022 100 000 |
| 8 | Seal carrier | INOX | 1027 040 200 | 1027 050 200 | 1027 065 200 | 1027 080 200 | 1027 100 200 |
| 9 | Diaphragm | EPDM | 1021 050 001 | 1021 050 001 | 1021 065 001 | 1021 080 001 | 1021 100 001 |
| 10 | Pressure disc | INOX | 1047 050 000 | 1047 050 000 | 1047 065 000 | 1047 080 000 | 1047 100 000 |
| 11 | Nut | INOX | 0007 710 080 | 0007 710 080 | 0007 712 080 | 0007 716 080 | 0007 716 080 |
| 12 | Spring | INOX | 1049 050 000 | 1049 050 000 | 1049 065 000 | 1049 080 000 | 1049 100 000 |
| | Spring for valves installed upright position | INOX | 1050 050 000 | 1050 050 000 | 1050 065 000 | 1050 080 000 | 1050 100 000 |
| 13 | Spindle guide cover | INOX | 1042 900 000 | 1042 900 000 | 1042 900 001 | 1042 900 002 | 1042 900 002 |
| 14 | Hexagonal screw | INOX | 0006 608 025 | 0006 608 025 | 0006 610 025 | 0006 610 025 | 0006 612 030 |
| 15 | O-ring | EPDM | 0170 012 020 | 0170 012 020 | 0170 012 020 | 0170 016 020 | 0170 016 020 |
| 16 | Washer | INOX | 0008 208 000 | 0008 208 000 | 0008 210 000 | 0008 210 000 | 0008 212 000 |
| | Main valve complete | PN10 - 25 | 1200 040 000 | 1200 050 000 | | 1200 080 000 | |
| | Main valve complete | PN10/16 | -- | -- | 1200 065 000 | | 1200 100 000 |
| | Main valve complete | PN25 | | | 1200 065 025 | | 1200 100 025 |
| | Repair kit for main valve with stainless steel connection, comprising item 7, 9, 15, 18 | PN10 - 25 | 1080 040 000 | 1080 050 000 | 1080 065 000 | 1080 080 000 | 1080 100 000 |

° Pressure stage / check flange


| Item | Description | Material | Article number | | |
|------|---|-----------|----------------|--------------|--------------|
| | | | DN 125 | DN 150 | DN 200 |
| 1 | Body ° | GJS-400 | 1004 125 000 | 1004 151 000 | 1004 200 000 |
| 2 | Valve cover | GJS-400 | 1014 125 000 | 1014 151 000 | 1014 200 000 |
| 3 | Spindle guide cover | INOX | 1024 900 005 | 1024 900 005 | 1024 900 006 |
| 4 | Spindle | INOX | 1026 125 000 | 1026 151 000 | 1026 200 000 |
| 5 | Seat | INOX | * | * | * |
| 6 | Counter seat | INOX | 1044 125 001 | 1044 150 001 | 1044 200 001 |
| 7 | Seal | EPDM | 1022 125 150 | 1022 151 000 | 1022 200 000 |
| 8 | Seal carrier | INOX | 1027 125 200 | 1027 151 200 | 1027 200 200 |
| 9 | Diaphragm | EPDM | 1021 125 001 | 1021 151 001 | 1021 200 001 |
| 10 | Pressure disc | INOX | 1047 125 150 | 1047 151 000 | 1047 200 000 |
| 11 | Nut | INOX | 0007 720 080 | 0007 720 080 | 0007 724 080 |
| 12 | Spring | INOX | 1049 125 150 | 1049 151 150 | 1049 200 000 |
| | Spring for valves installed upright position | INOX | 1050 125 150 | 1050 151 000 | 1050 200 000 |
| 13 | Spindle guide cover | INOX | 1042 900 003 | 1042 900 003 | 1042 900 004 |
| 14 | Hexagonal screw | INOX | 0006 616 035 | 0006 616 035 | 0006 620 045 |
| 15 | O-ring | EPDM | 0170 018 020 | 0170 018 020 | 0170 021 020 |
| 16 | Washer | INOX | 0008 216 000 | 0008 216 000 | 0008 220 000 |
| 21 | Retaining bracket | INOX | -- | -- | 1200 900 020 |
| | Main valve complete | PN10 | 1200 125 000 | 1200 151 000 | 1200 200 000 |
| | Main valve complete | PN16 | 1200 125 000 | 1200 151 000 | 1200 200 016 |
| | Main valve complete | PN25 | 1200 125 025 | 1200 151 025 | 1200 200 025 |
| | Repair kit for main valve with stainless steel connection, comprising item 7, 9, 15, 18 | PN10 – 25 | 1080 125 150 | 1080 151 000 | 1080 200 000 |

° Pressure stage / check flange

* not interchangeable

10.02.2025/AWT

3.3 Control valve pressure reducing stainless steel (design)

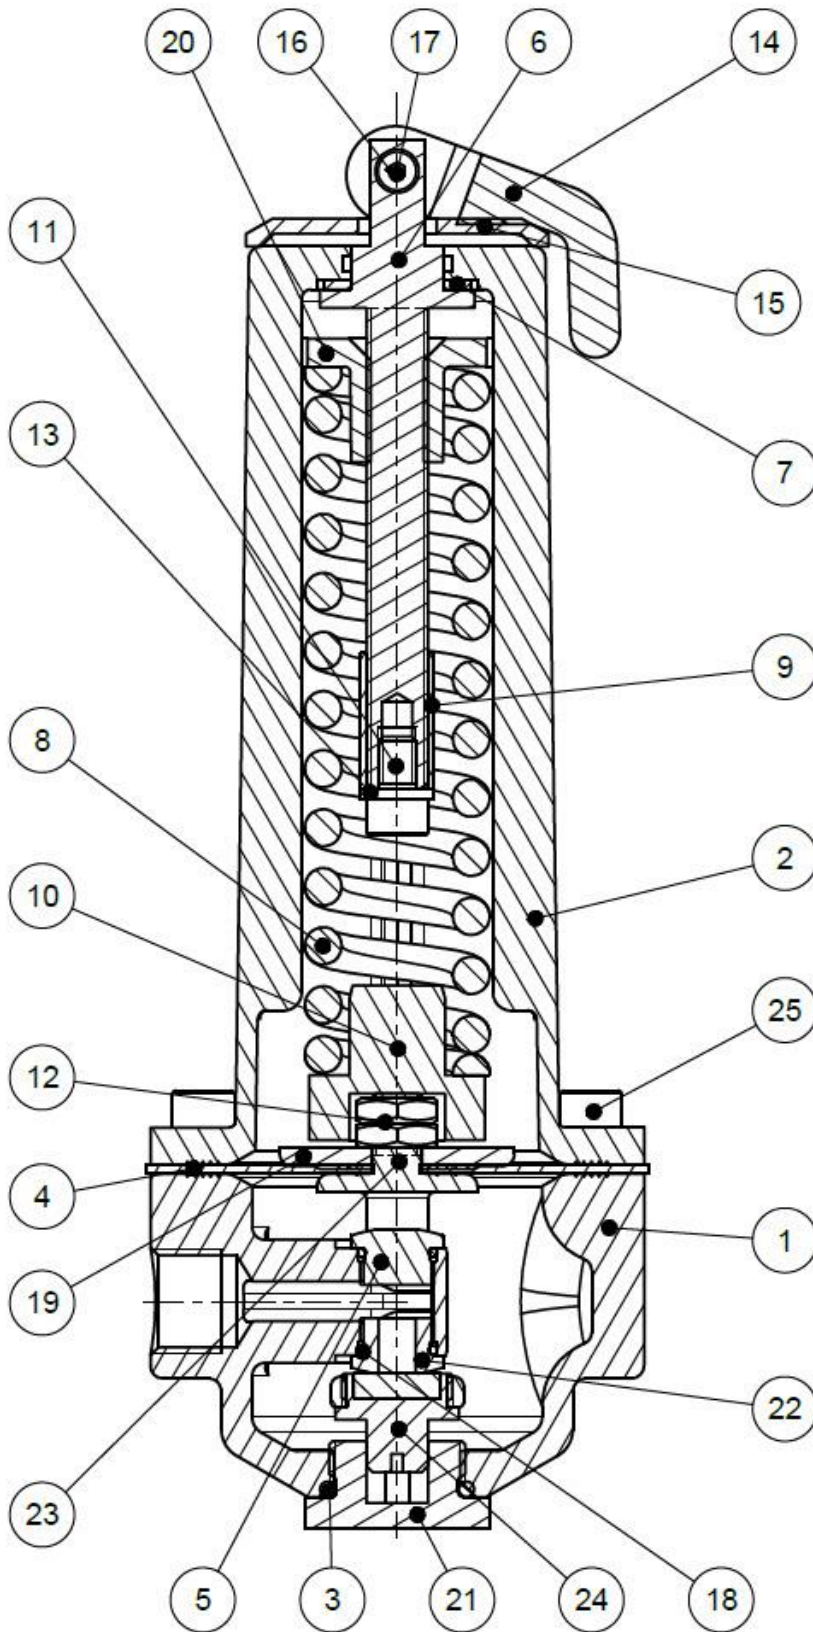

05.09.2017

3.4 Control valve pressure reducing stainless steel (parts list)







| Item. | Description | Material | Article number |
|-------|---|--------------------------|----------------|
| | | | PN 16/25 |
| 1 | Body | INOX | 1100 200 000 |
| 2 | Cover | INOX | 1108 200 000 |
| 3 | O-Ring | EPDM | 0170 020 025 |
| 4 | Diaphragm DN3/8" | EPDM | 1121 000 000 |
| 5 | Seat Compact Form 1.0, blind | INOX | 1117 200 000 |
| 6 | Pressure screw | INOX | 1133 200 000 |
| 7 | Seal Fiber 10/25 x 1 | Gummi | 0132 024 015 |
| 8 | Spring standard,... (see chart below) | INOX | 1145 200 000 |
| 9 | Distance collar for spring | INOX | 1133 300 000 |
| 10 | Spring guide | INOX | 1133 400 000 |
| 11 | Cylinder screw M6 x 10 | INOX | 0004 506 010 |
| 12 | Hex nut M8 x 0.5d | INOX | 0007 208 050 |
| 13 | Washer | INOX | 0008 206 000 |
| 14 | Adjusting lever | Kst – PA6.6 | 1135 000 001 |
| 15 | Washer for adjusting lever | Kst – PA6.6 | 1135 000 010 |
| 16 | Axis for clamp lever | INOX | 1135 000 011 |
| 17 | Cylinder screw M4 x 16 | INOX | 0004 804 016 |
| 18 | O-Ring | EPDM | 0170 010 015 |
| 19 | Pressure disc | INOX | 1129 012 000 |
| 20 | Pressure collar nut | Bronze | 1134 000 010 |
| 21 | Guide pin (DRV/MBV) | INOX | 1137 000 000 |
| 22 | Cover Compact Form 1.0, 6 mm | INOX | 1117 200 001 |
| 23 | Strap | INOX | 1136 000 002 |
| 24 | Seal support | INOX/EPDM | 1120 200 000 |
| 25 | Cylinder screw M6 x 16 | INOX | 0004 506 016 |
| | | REGULATING RANGE: | |
| | Control valve (Standard) | 1.5 – 12 bar | 1900 001 000 |
| | Control valve, blue label | 0.2 – 5 bar | 1900 001 001 |
| | Control valve, yellow label | 10 – 22 bar | 1900 001 002 |
| | Repair kit comprising item: Pos. 3, 4, 18 (2 Stk.), 24 | | 1180 000 020 |

20.12.2024



3.5 Control line and accessories

| Masternumber Description | Picture | Size more sizes might be available | Art. number |
|--|---|--|--|
| 0130 Composite sealing ring |  | stainless steel /NBR 3/8" stainless steel /NBR 1/2" stainless steel /NBR 3/4" steel/NBR 1" | 0130 012 000 0130 016 000 0130 025 000 0130 032 000 |
| 0273 Single component |  | Fitting attachment (consisting of connecting nut and clamping ring) DN 12 stainless steel Union nut (without clamping ring) | 0273 012 000 0274 xxx xxx |
| 0275 Support sleeve |  | stainless steel d4 – 6 stainless steel d12 – 9 stainless steel d12 – 10 | 0275 006 004 0275 012 009 0275 012 010 |
| 0283 Clamping ring |  | d6 stainless steel d12 stainless steel d18 stainless steel d8 - 6 stainless steel | 0283 006 000 0283 012 000 0283 018 000 0283 008 006 |
| 0284 Orifice |  | d12 stainless steel Ø 0.6 mm d12 stainless steel Ø 0.9 mm d12 stainless steel Ø 1.2 mm d12 stainless steel Ø 1.5 mm d12 stainless steel Ø 1.9 mm d12 stainless steel Ø 2.4 mm d12 stainless steel Ø 3.1 mm d18 stainless steel Ø 3.5 mm d18 stainless steel Ø 4.0 mm | 0284 006 000 0284 009 000 0284 012 000 0284 015 000 0284 019 000 0284 024 000 0284 031 000 0284 035 010 0284 040 010 |
| 0311 Male adaptor union |  | d 12 - 3/8" stainless steel d 12 - 1/2" stainless steel d 6 - 1/8" stainless steel d 6 - 1/4" stainless steel d 6 - 3/8" stainless steel d18 – 1/2" stainless steel | 0311 012 012 0311 012 016 0311 006 004 0311 006 008 0311 006 012 0311 018 016 |
| 0323 Straight union |  | DN 6 stainless steel DN 12 stainless steel | 0323 006 000 0323 012 000 |
| 0324 Straight screw-on screwed fitting |  | d12 - 3/8" stainless steel | 0324 012 012 |
| 0351 Reduction union |  | d6 - d12 stainless steel | 0351 012 006 |
| 0361 Female adaptor |  | d 10 - 3/8" stainless steel d 12 - 3/8" stainless steel d 12 - 1/2" stainless steel d 18 – 1/2" stainless steel | 0361 010 012 0361 012 012 0361 012 016 0361 018 016 |
| 0371 Male adaptor |  | DN 12 - 3/8" stainless steel | 0371 012 012 |
| 0401 Sleeve |  | 3/8" stainless steel 1/2" stainless steel 3/4" stainless steel 1" stainless steel | 0401 012 000 0401 016 000 0401 025 000 0401 032 000 |

| | | | |
|--|---|---|--|
| 0411 Adjustable male adaptor |  | DN 6 - 1/8" stainless steel DN12 - 3/8" stainless steel | 0411 006 004 0411 012 012 |
| 0431 Male adaptor elbow union |  | DN 6 - 1/8" stainless steel DN6 - 1/4" stainless steel DN12 - 3/8" stainless steel DN18 - 1/2" stainless steel | 0431 006 004 0431 006 008 0431 012 012 0431 018 016 |
| 0431 Male adaptor elbow union with venting |  | DN12 - 3/8" stainless steel | 0431 012 013 |
| 0451 Elbow union 90° |  | DN6 stainless steel DN12 stainless steel DN18 stainless steel | 0451 006 000 0451 012 000 0451 018 000 |
| 0455 Female adaptor elbow union 90° |  | IG 3/8" stainless steel IG 1/2" stainless steel IG 3/4" stainless steel IG 1" stainless steel | 0455 012 000 0455 016 000 0455 025 000 0455 032 000 |
| 0456 Female adaptor elbow union 90° |  | IG 3/8" - AG 3/8" stainless steel IG 1/2" - AG 1/2" stainless steel IG 3/4" - AG 3/4" stainless steel IG 1" - AG 1" stainless steel | 0456 012 000 0456 016 000 0456 025 000 0456 032 000 |
| 0461 T-union |  | d6 stainless steel d12 stainless steel d12 - 6 - 12 stainless steel d18 stainless steel | 0461 006 000 0461 012 000 0461 012 006 0461 018 000 |
| 0510 Plug |  | AG 3/8" konisch stainless steel AG 1/2" konisch stainless steel | 0510 012 000 0510 016 000 |
| 0511 Plug aeration for Hawido |  | AG 1/2" stainless steel AG 3/4" stainless steel AG 1" stainless steel (hexagon socket) | 0511 016 000 0511 025 000 0511 032 001 |
| 0520 Hexagonal male adaptor nipple |  | d 1/8" stainless steel d 1/4" stainless steel d 3/8" stainless steel d 1/2" stainless steel d 3/4" stainless steel | 0520 004 000 0520 008 000 0520 012 000 0520 016 000 0520 025 000 |
| 0541 Ball valve |  | DN 3/8" stainless steel DN 1/2" stainless steel DN 3/4" stainless steel | 0541 012 001 0541 016 000 0541 025 000 |
| 0545 Y-filter |  | Y-filter stainless steel IG 3/8" Single components: Filter sieve stainless steel Plug complete Seal big for Y-filter O-Ring Y-filter stainless steel 1/2" | 0545 112 002 0545 900 051 0545 112 010 0545 112 011 0545 112 012 0545 116 000 |
| 0549 One-way flow restrictor & Throttle valve |  | Stainless steel IG 3/8" Typ B d 12 with a long spindle | 0549 000 005 |

| | | | |
|--|---|--|--|
| <p>0570 Non-return valve</p> |  | <p>3/8" Brass (max. 40 bar) 1/2" Brass (max. 40 bar)</p> | <p>0570 012 045 0570 016 045</p> |
| <p>0600 Manometer</p> |  | <p>AG 3/8" 0 - 6 bar AG 3/8" 0 - 10 bar AG 3/8" 0 - 16 bar AG 3/8" 0 - 25 bar AG 3/8" 0 - 40 bar AG 3/8" 0 - 60 bar</p> | <p>0600 012 006 0600 012 010 0600 012 016 0600 012 025 0600 012 040 0600 012 060</p> |
| <p>0610 Solenoid valves</p> |  | <p>Solenoid valve normally open 2/2 way valve (1795/96) 122K84</p> <p>Solenoid valve normally closed 2/2 way valve (1795/96) E121K04</p> <p>Solenoid valve normally open 3/2 way valve (1703 up to DN 100 1603, 1706 PN 16 all diameters) 132K04</p> <p>Solenoid valve normally closed 3/2 way valve (1704 up to DN 100, 1604) E131K04</p> <p>Solenoid valve normally open 2/2 way valve (1704 DN 125 and above 1304, 1404, 1504) (old version: E322 H73 06)</p> <p>Solenoid valve normally closed 2/2 Wegeventil (zu 1703 ab DN 125, 1303, 1403, 1503, 1706 PN 25 ab DN 125) (old version: E321 H13)</p> <p>Magnetventil universel 3/2 way valve (1706 PN 25 up to DN 100)</p> <p>*****</p> <p>Spare part : Diaphragm for solenoid type 0610 510 001 and 0610 510 002</p> <p>Spare parts Kit for solenoid valve type 0610 510 001</p> | <p>0610 122 084</p> <p>0610 121 004</p> <p>0610 132 004</p> <p>0610 131 004</p> <p>0610 510 002</p> <p>0610 510 001</p> <p>0610 133 005</p> <p>*****</p> <p>0610 590 001</p> <p>0610 590 002</p> |
| <p>0620 Coil</p> |  | <p>Coil AC voltage Indicate the voltage</p> <p>Coil DC voltage Indicate the voltage</p> | <p>0620 xxx xxx</p> <p>0621 xxx xxx</p> |
| <p>0630 Appliance socket for electric coil</p> |  | <p>Appliance socket for electric coil</p> | <p>0630 000 000</p> |
| <p>0652, 0653 Plug module Type LBV</p> |  | <p>Plug module for solenoid valves Type LBV 24 DC = 8-14S incl. 2m cable</p> <p>Plug module for solenoid valves Type LBV 24, IP 65 IN: 48-230VAC/DC OUT: 48VDC incl. 2m cable 3-wire</p> <p>For use with 48VDC coils only</p> | <p>0653 024 008</p> <p>0653 230 000</p> |

| | | | |
|---|---|--|--|
| 0670 Hexagonal overcut |  | AG 3/8" IG 1/8" stainless steel AG 3/8" IG 1/4" stainless steel AG 1/2" IG 3/8" stainless steel AG 3/4" IG 3/8" stainless steel AG 1" IG 1/8" stainless steel | 0670 012 004 0670 012 008 0670 016 012 0670 025 012 0670 032 012 |
| 0671 Threaded connection |  | AG 3/8" IG 1/2" stainless steel AG 3/4" IG 1" stainless steel | 0671 016 012 06710 32 025 |
| 0680 Male adaptor nipple |  | AG 3/8" L = 30 mm stainless steel AG 3/8" L = 40 mm stainless steel AG 3/8" L = 50 mm stainless steel AG 3/8" L = 60 mm stainless steel AG 3/8" L = 70 mm stainless steel AG 3/8" L = 80 mm stainless steel AG 3/8" L = 110 mm stainless steel | 0680 012 030 0680 012 040 0680 012 050 0680 012 060 0680 012 070 0680 012 080 0680 012 110 |
| 0690 Male reduction nipple |  | AG 3/8" - 1/8" stainless steel AG 3/8" - 1/4" stainless steel AG 1/2" - 3/8" stainless steel AG 3/4" - 3/8" stainless steel AG 1" - 3/8" stainless steel | 0690 012 004 0690 012 008 0690 016 012 0690 025 012 0690 032 012 |
| 0711 T-union |  | IG 3/8" egal stainless steel IG 1/2" egal stainless steel IG 3/4" egal stainless steel IG 1" egal stainless steel | 0711 012 000 0711 016 000 0711 025 000 0711 032 000 |
| 0730 Seamless pipe |  | d6 x 1mm stainless steel d12 x 1.5 mm stainless steel d15 x 1.5 mm stainless steel d18 x 1.5 mm stainless steel | 0730 006 010 0730 012 015 0730 015 015 0730 018 015 |
| 0731 PA-tube |  | Tube AD 6 mm, ID 4 mm Tube AD 12 mm, ID 9 mm | 0731 006 004 0731 012 009 |
| 1188 Rep. Set Control line |  | From serial number 14252 (Januar 2003) DN40 bis 100 DN125 bis 300 From serial number 25915 (Juni 2014, Filter Typ B (0545 112 002) DN40 bis 100 DN125 bis 200 | 1188 065 100 1188 125 300 1188 000 000 1188 000 001 |
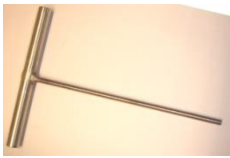
| Tools and accessories | | | |
|---|---|--|------------------------------|
| 1199 Spindel stroke tester |  | M5 M6 | 1199 000 000 1199 000 010 |
| 1199 Tool for seal holder |  | Key for assembling the seal holder of the pilot valve | 1199 000 020 |
| 5292 Grease | | Hawle Typ: VR 69-252 Tube à 90 g | 5292 000 000 |


AG: Outside thread
IG: Inside thread

AD: Outside diameter
ID: Inside diameter


10.02.2025

3.6 Position indicator (drawing)

DN 40 – DN 100

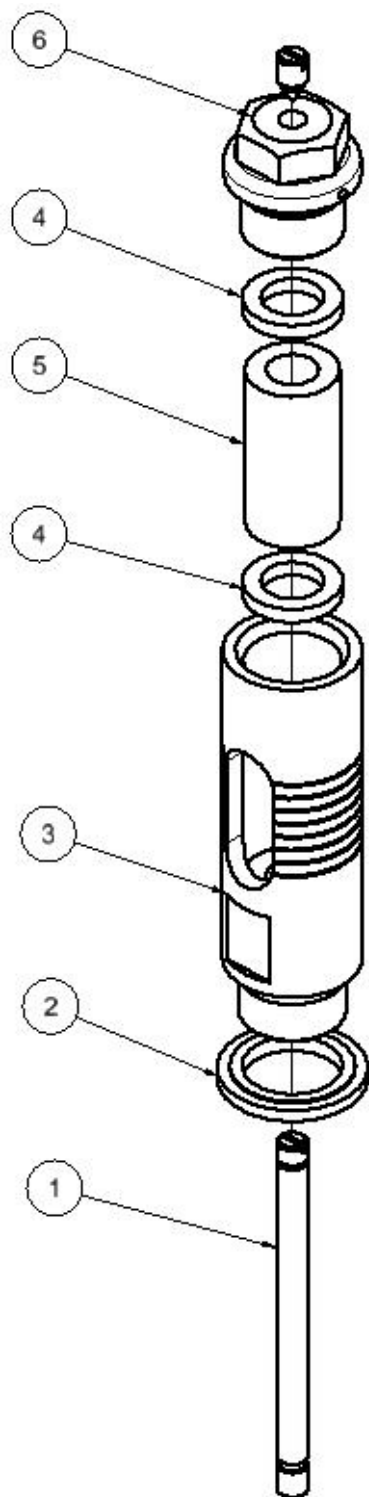

DN 125 – DN 300

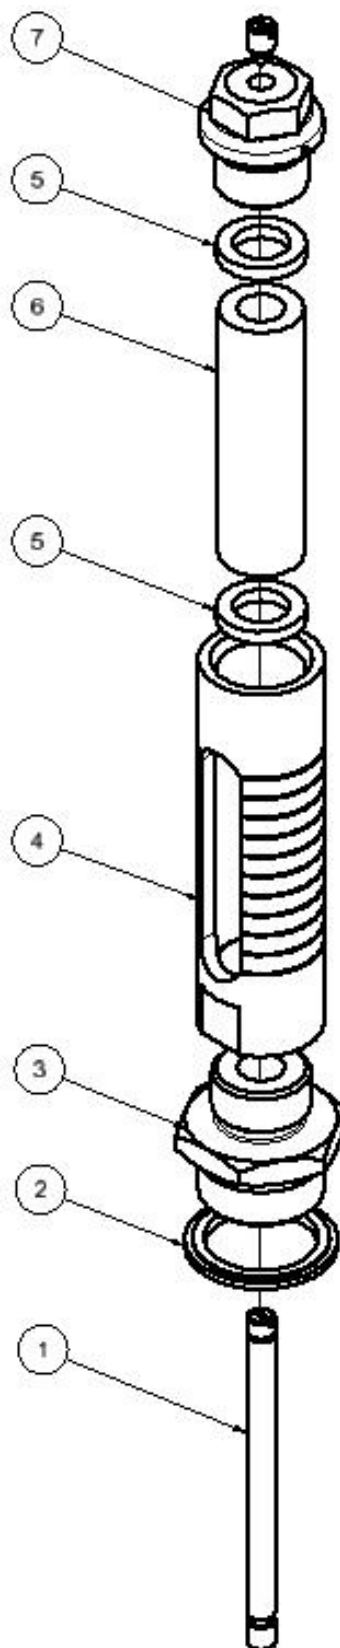

12.03.2014/plü

3.7 Position indicator (Parts list)

| Item | Description | Material | Article number | | | | |
|------|--------------------------------------|---------------|----------------|--------------|--------------|--------------|--------------|
| | | | DN 40 | DN 50 | DN 65 | DN 80 | DN 100 |
| 1 | Pin | Stainl. steel | 1992 000 050 | 1992 000 050 | 1992 000 080 | 1992 000 080 | 1992 000 100 |
| 2 | Seal 1/2" | Stainl./NBR | 0130 016 000 | 0130 016 000 | 0130 016 000 | 0130 016 000 | 0130 016 000 |
| 3 | Housing | Stainl. steel | 1994 000 010 | 1994 000 010 | 1994 000 010 | 1994 000 010 | 1994 000 010 |
| 4 | Gasket | EPDM70 | 1992 900 030 | 1992 900 030 | 1992 900 030 | 1992 900 030 | 1992 900 030 |
| 5 | Sight tube | Glas | 1993 050 100 | 1993 050 100 | 1993 050 100 | 1993 050 100 | 1993 050 100 |
| 6 | Plug 1/2" | Stainl. steel | 0511 016 000 | 0511 016 000 | 0511 016 000 | 0511 016 000 | 0511 016 000 |
| | Position indicator | | 1995 000 050 | 1995 000 050 | 1995 000 080 | 1995 000 080 | 1995 000 100 |
| | Repair kit comprising items: 2 and 4 | | 1996 000 000 | 1996 000 000 | 1996 000 000 | 1996 000 000 | 1996 000 000 |

| Item | Description | Material | Article number | | | | |
|------|--------------------------------------|---------------|----------------|--------------|--------------|--------------|--------------|
| | | | DN 125 | DN 150N | DN 200 | DN 250 | DN 300 |
| 1 | Pin | Stainl. steel | 1992 000 125 | 1992 000 150 | 1992 000 200 | 1992 000 250 | 1992 000 300 |
| 2 | Seal 3/4" | Stainl./NBR | 0130 025 000 | 0130 025 000 | 0130 025 000 | | |
| | Seal 1" | Steel/NBR | | | | 0130 032 000 | 0130 032 000 |
| 3 | Adapting nipple 3/4" | Stainl. steel | 1992 900 020 | 1992 900 020 | 1992 900 020 | 1992 900 020 | 1992 900 020 |
| 4 | Housing | Stainl. steel | 1994 000 020 | 1994 000 020 | 1994 000 020 | 1994 000 020 | 1994 000 030 |
| 5 | Gasket | EPDM70 | 1992 900 030 | 1992 900 030 | 1992 900 030 | 1992 900 030 | 1992 900 030 |
| 6 | Sight tube | Glas | 1993 125 250 | 1993 125 250 | 1993 125 250 | 1993 125 250 | 1993 300 000 |
| 7 | Plug 1/2" | Stainl. steel | 0511 016 000 | 0511 016 000 | 0511 016 000 | 0511 016 000 | 0511 016 000 |
| | Position indicator | | 1995 000 125 | 1995 000 150 | 1995 000 200 | 1995 000 250 | 1995 000 300 |
| | Repair kit comprising items: 2 and 5 | | 1996 000 010 | 1996 000 010 | 1996 000 010 | 1996 000 020 | 1996 000 020 |

12.03.2014/plü

E. Annex

1. Torque table

When assembling the main valve and the pilot valve, all bolts are checked with a torque wrench according to the following list. Grease the bolts before mounting !

| Main valve | Diameter DN | Hexagon bolt M | Streight class 1) | Tightening torque | |
|------------|----------------|-------------------|----------------------|-------------------|---------|
| | | | | Reference | Max. 2) |
| | 40 - 50 | M 8 | A4 / 80 | 22 Nm | 25 Nm |
| | 65 - 80 | M 10 | | 47 Nm | 50 Nm |
| | 100 | M 12 | | 84 Nm | 87 Nm |
| | 125 - 150 | M 16 | | 172 Nm | 216 Nm |
| | 200 | M 20 | | 285 Nm | 423 Nm |
| | 250 | M 20 | | 285 Nm | 423 Nm |
| | 300 | M 20 | | 380 Nm | 423 Nm |

| Pilot valve | Typ | Hexagon Socket bolt | Streight class 1) | Tightening torque | |
|-------------|------------------|------------------------|----------------------|-------------------|--------|
| | | | | Reference | Max. |
| | DRV / DAV | M 6 | A2 / A4 / 70 | 8 Nm | 8,5 Nm |
| | MBV / RBS | | | | |
| | Control valve | Hexagon bolt M | Streight class 1) | Tightening torque | |
| | NAZ | M 6 | A2 / A4 / 70 | 8 Nm | 8,5 Nm |

(Torque for bolts with term in head A2)

| Main valve | Diameter DN | Hexagon bolt M | Streight class 1) | Tightening torque | |
|------------|----------------|-------------------|----------------------|-------------------|--------|
| | | | | Reference | Max. |
| | 40 - 50 | M 8 | A2 / 70 | 17 Nm | 19 Nm |
| | 65 | M 10 | | 33 Nm | 36 Nm |
| | 80 | M 10 | | 40 Nm | 40 Nm |
| | 100 | M 12 | | 70 Nm | 72 Nm |
| | 125 - 150 | M 16 | | 172 Nm | 172 Nm |
| | 200 | M 20 | | 280 Nm | 285 Nm |
| | 250 | M 20 | | 280 Nm | 285 Nm |
| | 300 | M 20 | | 235 Nm | 240 Nm |

Note: 1) = Term on bolt head A2 – 70 or A4 – 80!

2) = Maximum permissible torque according strength analysis

Bolts according SN EN ISO 4014 und SN EN ISO 4017

Stand: FO 0065, Rev. 12 / 19.12.2017

F. Hawle in Europe

Addresses:

Hawle Armaturen AG
Hawlestrasse 1
CH-8370 Sirnach
www.hawle.ch

Telefon +41 (0)71 969 44 22
Telefax +41 (0)71 969 44 11

Hawle Armaturen GmbH
Liegnitzer Strasse 6
D-83395 Freilassing
www.hawle.de

Telefon +49 (0)8654 63 03 - 0
Telefax +49 (0)8654 63 03 60

E. Hawle Armaturenwerke GmbH
Wagrainerstr. 13
A-4840 Vöcklabruck
www.hawle.at

Telefon +43 (0)76 72/72 576 0
Telefax +43 (0)76 72 78 464

Hawle Kft
Dobogókői út 5
H-2000 Szentendre
www.hawle.hu

Telefon +36 (0) 26 501 501
Telefax +36 (0) 26 501 502

Hawle Armatury spol. s r.o.
Ricanská 375
CZ-25242 Jesenice u.Prahy
www.hawle.cz

Telefon +420 (0)2 410 03 111
Telefax +420 (0)2 41 00 33 33

Hawle Spółka zo.o
ul. Piaskowa 9
PL-62-028 Koziegłowy
www.hawle.pl

Telefon +48 (0)61 811 14 00
Telefax +48 (0)61 811 14 27

Hawle s.r.o.
Pezinská c.30
SK-903 01 Senec
www.hawle.sk

Telefon +421 (0)2 45 92 21 87
Telefax +421 (0)2 45 92 21 88

S.C. Hawle S.R.L.
Calea Sagalui 104
RO-300516 Timisoara
www.hawle.ro

Telefon +40 268 47 78 81
Telefax +40 356 80 06 68

DM Armaturen EOOD
Ul. Lokomotiv 7
BG-1220 Sofia
www.hawle.bg

Telefon +359 (0)2 931 12 77
Telefax +359 (0)2 931 04 36

Partners:

19.08.2014-1/plü

